



Stainless Steel Soap Dispenser

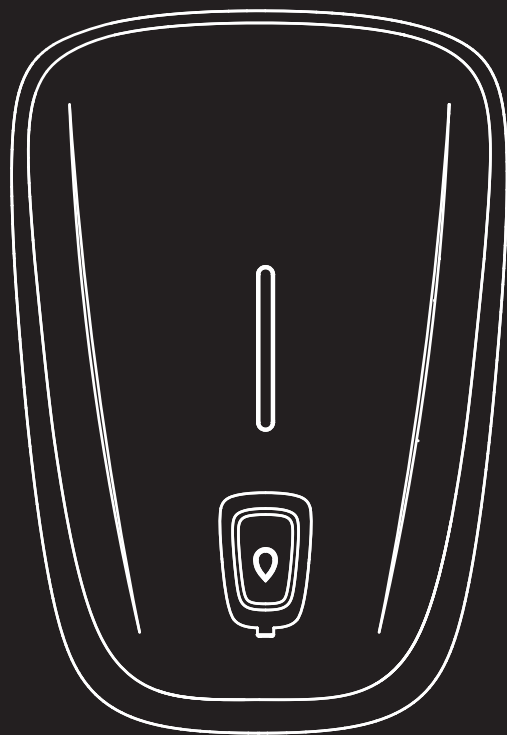


- Body: 304 stainless steel with exposed surfaces in satin/bright finish
- Wall Plate: 304 stainless steel
- Soap Refill Window
- Corrosion-Resistant
- Product Capacity: 1200 ml
- Product Size: 220x150x97mm

Installation


- A** A set of the product in user's hand including: a dispenser, a use manual, a accessories package (a plate, a key, three screws and tacos plastics).

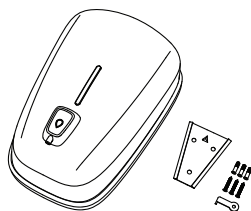


- B** Take the plate from the accessories package, and locate the place where will be made the holes for the fixation: horizontal and vertical mark.

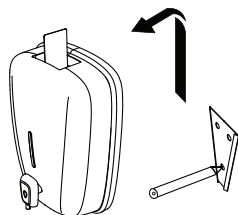


- C** Make the holes on the wall with a drill for concrete, $\varnothing$ 4 mm.

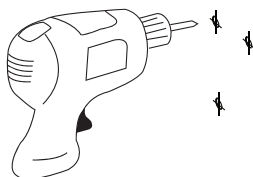


- D** Fix the plate on the wall by the tacos plastics and screws provided.

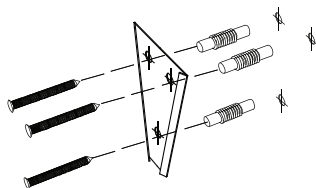

- E** Slide the dispenser body onto the plate and fix its final position adjusting the anchor screw.

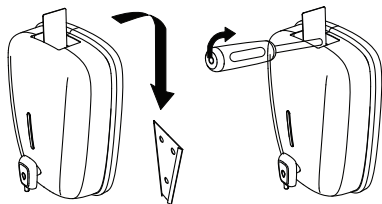

- F** Fill the liquid soap through the top lid, after closing it check the level by means of the level viewer. Press the front button to dispense the soap.

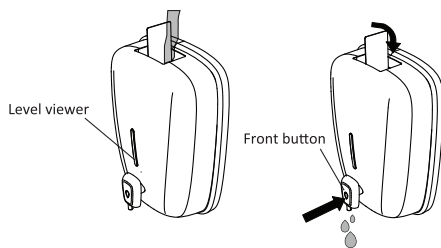

Filling the Dispenser

- This dispenser is designed for PH neutral liquid soap.
- Avoid filling very thick liquids.
- When filling with liquid soap, be sure to wipe off liquid spilled on the tank. Never overfill, otherwise it will accelerate rust.

Maintaining the Dispenser

- If the dispenser is dirty and becomes clogged, pour ONLY warm water into the dispenser and gently pump it to clear the blockage. NEVER try inserting a sharp object e.g. pin into the soap nozzle, which could irreparably damage the pump and void the warranty.
- To clean the outside of the dispenser with soft cloth, use water or warm soapy water or approved stainless steel cleaner. Wipe the dispenser after cleaning.